

1

Removable wristband / Abnehmbares Armband

F Bracelèt amovible E Correa de quita y pon NL Afneembare armband I Bracciale rimovibile PL Zdejmowana opaska na rękę H Levehető karpánt
RO Brățară demontabilă CZ Snímatelný pásek na ruku SK Odoberateľný náramok P Braclete amovível S Avtagbart armband RUS Съемный кистевой
ремешок BG Сменяема каишка GR Αφαιρούμενο λουράκι βραχίονα TR Çıkarılabilir kol bandı FIN Irrotettava rannehihna

2

Sensor button / Sensortaste

 
F Touche tactile E Tecla de sensor NL Sentoetoets I Pulsante sensore PL Przycisk czujnika H Szenzorgomb RO Tastă senzor CZ Tlačítko senzoru
SK Tlačidlo snímača P Sensor S Sensorknapp RUS Сенсорная кнопка BG Сензорен бутон GR Πλήκτρο αισθητήρα TR Sensör Düğmesi FIN Anturipainike

3


Fastener / Verschluss






F Fermeture E Cierre NL Sluiting I Chiusura PL Zapięcie H Zár RO Dispozitiv de închidere CZ Uzávěr SK Uzáver P Fecho S Lås
RUS Защелка BG Закопчалка GR Κούμπωμα TR Kilit FIN Kiinnitys

Fit Track 1900 / 3900



Fit Track 5900

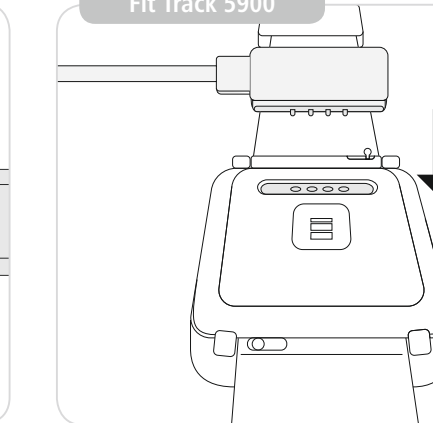

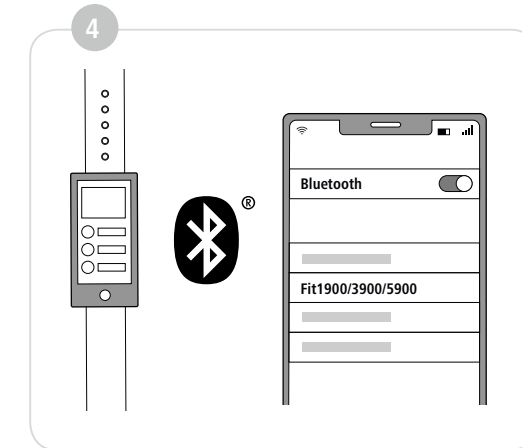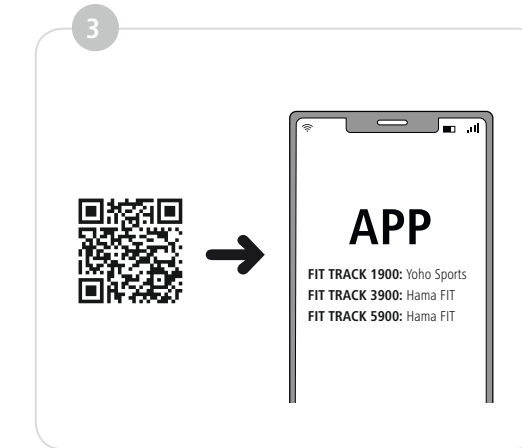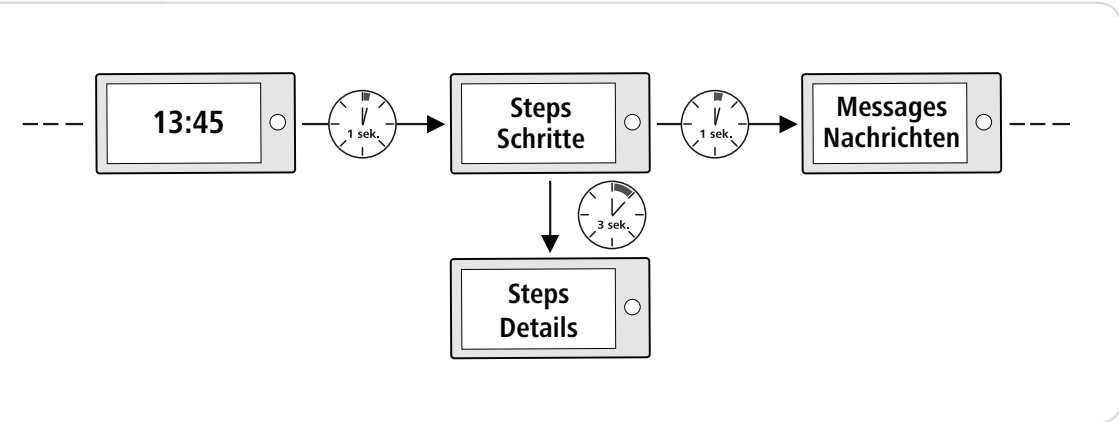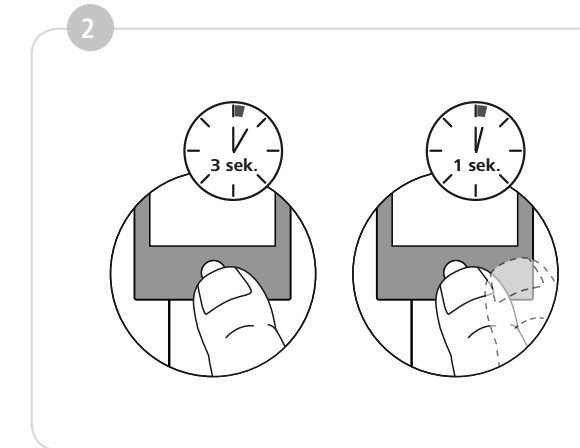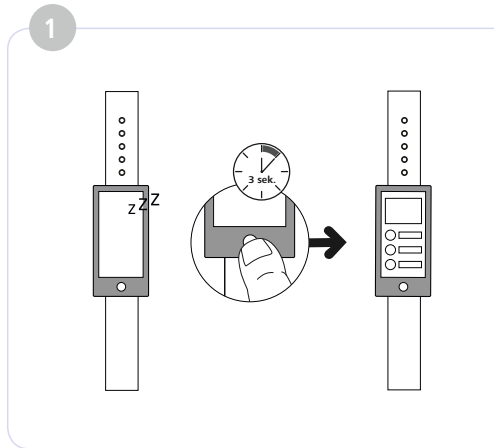

All listed brands are trademarks of the corresponding companies. Errors and omissions excepted, and subject to technical changes. Our general terms of delivery and payment are applied.
00178600_00178601_00178602/12.19

